

Vodavi Infinite/STS/STS_e/XTS Setting Time and Date

The assigned attendant station (typically Ext. 100) can set the system time and date. The following steps need only to be done at this phone.

1. Dial 6 9 2 on the dial pad.
2. Enter time and date in the following format: YYMMDDHHMM YY – year (00–99) MM – month (01–12) DD – day (01–31) HH – hour (00–23) MM – minute (00–59)
3. When the correct number of digits are entered, a confirmation tone will be heard.
4. Display updates with new time and date.